

MEASURING GUIDE FOR CUSTOM RIDING BOOTS

FOR THIS GUIDE YOU WILL NEED







A fabric tape measure

Your normal riding pants & socks

And a helping hand

Getting your correct leg height

Fig. 1.0

Slightly bent leg

Crease of Knee

- Measure height with a slightly bent leg
- Measure from the crease of the knee to the heel of the foot.
- Know that the boots will drop so make sure to measure to the crease

Getting Your Calf Size right

Fig. 1.1


Straight leg

Widest Part of Your Calf

- Measure the widest part of your calf.
- Slide down the measuring tape to find the widest part of your leg.
- Do this for both legs as they may differ!



Measuring guide for custom riding boots

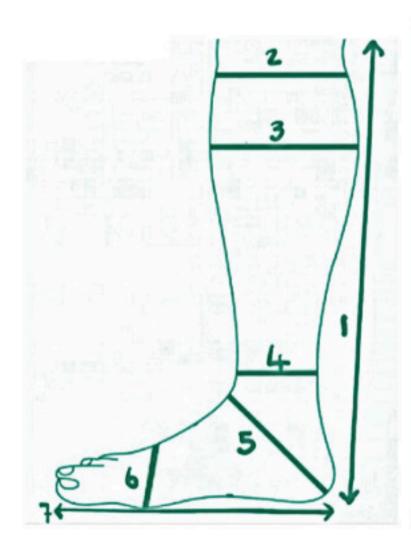

- 1 Measure height from heel to below the knee.
- 2 Measure top leg circumference just below the knee bend.
- 3 Measure calf circumference on the widest part of the leg
- 4 Measure ankle circumference 5cm up above the ankle borne.
- 5 Measure circumference around the bridge.
- 6 Measure foot width on top from side to side on the widest part of the foot.
- 7 Measure foot length from heel to the biggest toe.
- i) Measure height distance from measurement 2 to measurement 3.
- ii) Measure height distance from measurement 3 to measurement 4.
- iii) List your normal SA/UK shoe size.

NB: Please all measurements to be done in standing position.

- Make sure to double-check measurements to ensure accuracy.
- Please make sure you measure same positions on both legs to avoid confusion
- It is always recommended to measure more than once.